


### 3-5. Using the interior lights

## Interior lights list

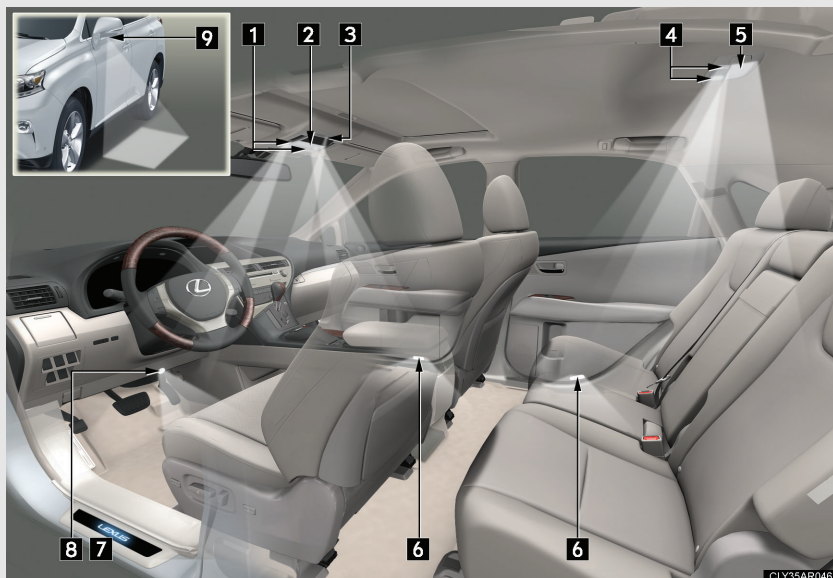

1 Front personal lights (→P. 668)

2 Front interior light (→P. 668)

3 ► RX350

Shift lever light (when the “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode)

► RX450h

Shift lever light (when the “POWER” switch is in ACCESSORY or ON mode)

4 Rear personal lights (→ P. 668)

5 Rear interior light


6 Door courtesy lights

7 Scuff lights (if equipped)

8 Footwell lights

9 Outer foot lights


Interior lights

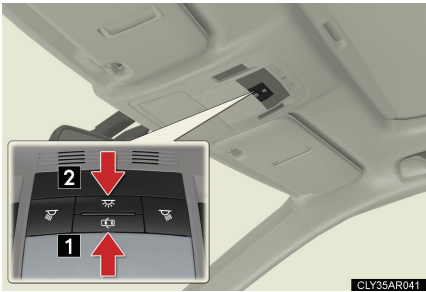

- 1 Turns the lights on/off linked to door positions.
- 2 Turns the lights on/off


Personal lights

► Front

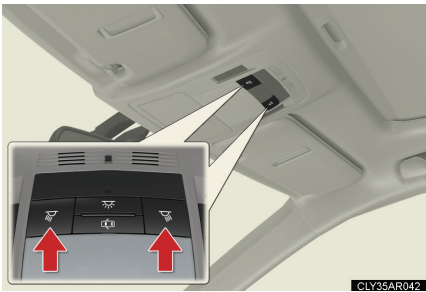

Turns the light on/off

► Rear

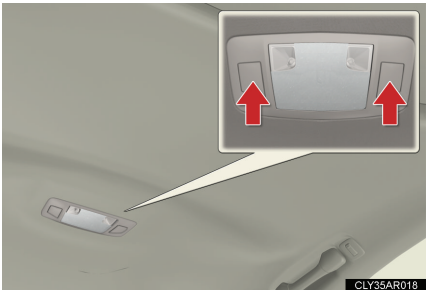

Turns the light on/off

### ■ Illuminated entry system

#### ► RX350

The lights automatically turn on/off according to “ENGINE START STOP” switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.

#### ► RX450h

The lights automatically turn on/off according to “POWER” switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are open/closed.

### ■ To prevent 12-volt battery discharge

When the “ENGINE START STOP” switch (RX350) or the “POWER” switch (RX450h) is turned off, the lights will go off automatically after 20 minutes.

- Personal lights
- Interior lights
- Door courtesy lights
- Scuff lights (if equipped)
- Footwell lights

### ■ Customization

Settings (e.g. the time elapsed before the lights turn off) can be changed. (Customizable features →P. 980)